


# USER MANUAL

OLIGHT

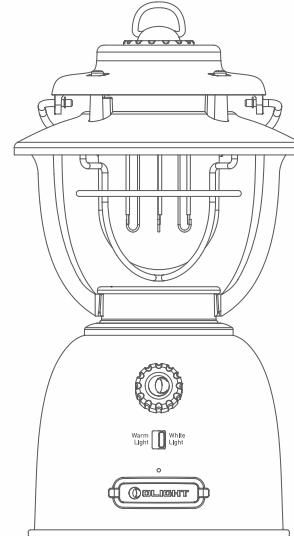


## Olantern Stretch

A height-adjustable camping light with dual light sources.


### REVERSE CHARGING (POWER BANK FUNCTION)

The product has 2 output ports for charging other digital devices. While reverse charging, the indicator displays the battery level.

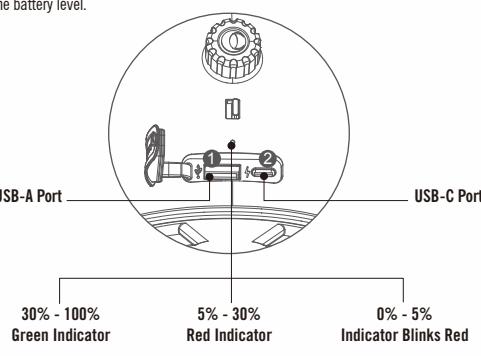

### While activated (Light):

The indicator will be on for 5s after any operation and will turn off when not in use.

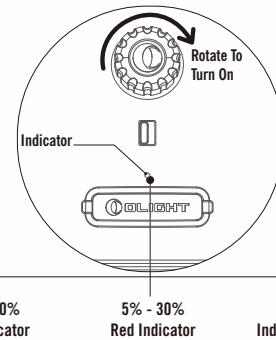

Justering av varmt/vitt ljus: Dra brytaren åt vänster för varmt ljus, höger för vitt ljus.

Stegöst ljusflöde: Vrid ratten medurs för att öka ljusflödet. Vrid ratten moturs för att minska ljusflödet.

### ( NL ) Nederland

#### BEDIENINGSINSTRUCTIES

Aan/Uit: Draai de knop met de klok mee om het licht aan te doen; draai de knop tegen de klok in om het licht uit te doen.

Schakelen tussen warm en wit licht: Schakel de schakelaar naar links voor warm licht, naar rechts voor wit licht.

Traploze helderhedsregeling: Draai de knop met de klok mee om de helderheid te verhogen. Draai de knop tegen de klok in om de helderheid te verlagen.

### ( PL ) Polska

#### INSTRUKCJA OBSŁUGI

Włącz/Niełącz: Obróć galkę w prawo, aby włączyć światło; obróć galkę w lewo, aby wyłączyć światło.

Światło ciepłe/białe: Przesuń w przód przełącznik w lewo, aby uzyskać światło ciepłe, w prawo, aby uzyskać światło białe.

Bestępniowa kontrola jasności: Obróć galkę w prawo, aby zwiększyć jasność. Obróć galkę w lewo, aby zmniejszyć jasność.

### ( DE ) Deutsch

#### BEDIENUNG

Ein-/Ausschalten: Zum Einschalten der Lampe den Knopf im Uhrzeigersinn drehen, zum Ausschalten gegen den Uhrzeigersinn drehen.

Umsschalten zwischen warmem und weißem Licht: Den Schalter nach links für warmes Licht, nach rechts für weißes Licht umlegen.

Helligkeit einstellen: Durch Drehen des Knopfes im Uhrzeigersinn wird die Helligkeit erhöht. Durch Drehen gegen den Uhrzeigersinn wird die Helligkeit verringert.

### ( HU ) Magyarország

#### HASZNÁLATI UTASÍTÁS


On/Off: A fény bekapcsolásához forgassa a gombot az óramutató járásával megegyező irányba, a fény kikapcsolásához forgassa a gombot az óramutató járásával ellentétes irányba.

Meleg/fény kapcsolása: A kapcsolót balra kapcsolva meleg fénnyel, jobbra kapcsolva fehér fénnyel kap.


Fokozatmentes fényszabályozás: A fényerő növeléséhez forgassa a gombot az óramutató járásával megegyező irányba. A fényerő csökkenéséhez forgassa a gombot az óramutató járásával ellentétesen.

02

### IN THE BOX

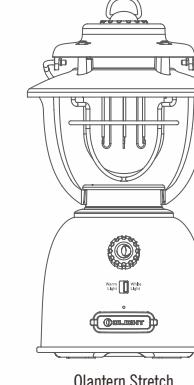

Olantern Stretch

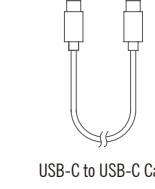

USB-C to USB-C Cable

### SPECIFICATIONS

#### WHITE LIGHT MODE CCT: 3250~3750K

HIGH	20m	10m
500 lumens	20min	60%
LOW	130 lumens	35h
130 lumens	18h	2h

#### WARM LIGHT MODE CCT: 1900~2100K

HIGH	130 lumens	250h
10 lumens	2h	

### HIGH LOW

White Light Mode 20m 10m

Warm Light Mode 10m 2m

### LIGHTING RADIUS (ELEVATED) HIGH LOW



White Light Mode 2.9m 2m

Warm Light Mode 2m 1.1m

120cd	IPX5	0.8m	1020g/35.96oz
(D)123*(H)222mm	Rechargeable Li-ion Battery 16000mAh 3.7v [59.2Wh]	Working temperature 0~45°C	

\* Above data are tested per ANSI NEMA FL-1 2013 standard in Olight's labs for reference. The tests are performed indoors under a room temperature of 25 degrees celsius with windless conditions. The runtime may vary depending on the external temperature and ventilation conditions, and these biases may affect the results of testing.


### PRODUCT OVERVIEW

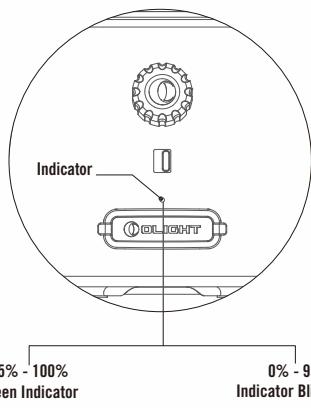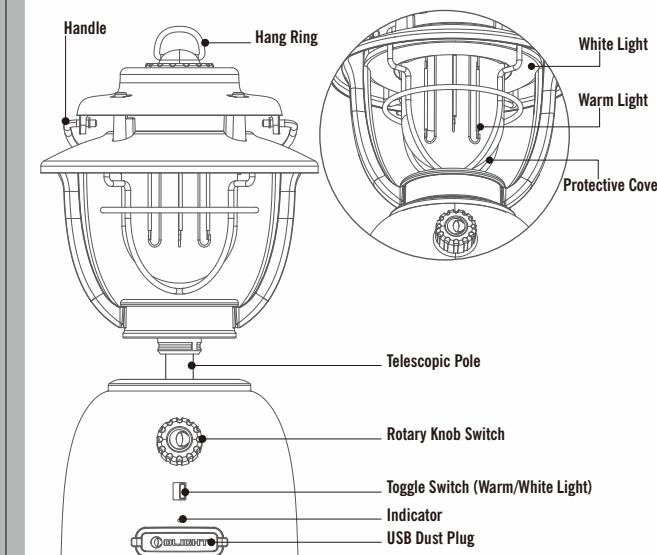

NOTE \* Best charging efficiency with an 18W or higher-capacity power source. It takes only 5.5 hours to fully charge with a 18W USB-C power source.

### POWER BANK FUNCTION

Built-in 16000mAh battery pack consists of 4 Li-ion batteries, and charges phones and other digital devices.

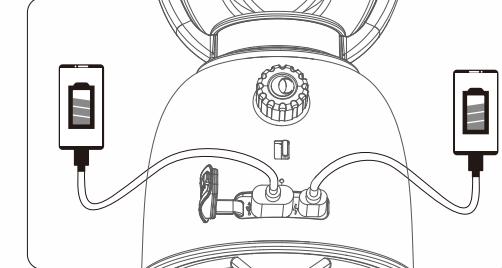

### CHARGING

Before first use, please fully charge the product. Connect one end of the provided USB-C cable to an external USB-C power source (power adapter not included), open the silicone dust plug that shields the USB-C charging port of the product, and then insert the other end of the cable into the USB-C charging port.

While charging, the indicator below the rotary knob blinks red to indicate it is in charging status, and it turns green when fully charged (battery power > 95%).

### CONTENTS

( EN ) English	01
( CN ) 简体中文	01
( FI ) Finnish	01
( NO ) Norwegian	01
( SV ) Swedish	01
( NL ) Nederlands	02
( PL ) Polska	02
( DE ) Deutsch	02
( HU ) Magyarország	02
( RU ) Русский	03
( ES ) Español	03
( RO ) Românsesc	03
( UA ) Український	03
( JP ) 日本語	04
( KR ) 한국어	04
( TH ) ไทย	04
( FR ) Français	04
( IT ) Italiano	05
( SK ) Slovenský jazyk	05
( PT ) Português	05

### ( EN ) English

#### OPERATING INSTRUCTIONS

On/Off: Rotate the knob clockwise to turn on the light; rotate the knob counterclockwise to turn off the light.

Warm/White Light Switching: Toggle the switch left for warm light, right for white light.

Stepless Brightness Control: Turn the knob clockwise to increase brightness. Turn the knob counterclockwise to decrease brightness.

### ( CN ) 简体中文

#### 操作说明

开/关机：顺时针旋转开关，开机；逆时针旋转开关，关机。

模式切换：使用拨动开关切换，左边为暖光，右边为白光。

调光：采用无极调光，顺时针旋转，灯光从最低亮逐渐到最高亮，逆时针旋转，则从最高亮逐渐到最低亮，直到关机。

### ( FI ) Finnish

#### KÄYTTÖOHJEET

Päääle/pois: Kierrä nuppu myötäpäivään valon sytyttämiseksi; sammata valo käntämällä nupua vastapäivään.

Lämpimän/neutraalin valon vaihto: Käännä kytkintä vasemmalle lämpimälle valolle ja oikealle neutraalille valolle.

Portaan kirkauksen säätö: Lisää kirkkautta käntämällä nupua vastapäivään. Vähennä kirkkautta käntämällä nupua vastapäivään.

### ( NO ) Norwegian

#### BRUKSANVISNING

På/Av: Vri knotten med klokken for å slå på lyset; vri knotten mot klokken for å slå av lyset.

Bryter for varmt/hvit lys: Vri bryteren til venstre for varmt lys, til høyre for hvitt lys.

Trinnløs regulerung av lysstyrken: Vri knotten med klokken for å øke lysstyrken. Vri knotten med klokken for å redusere lysstyrken.

### ( SV ) Swedish

#### BRUKSANVISNINGAR

På/Av: Vrid ratten medur för att tända lampan; vrid ratten moturs för att släcka lampan.



### DANGER

• DO NOT shine the light directly into human eyes. This may cause temporary blindness or permanent damage to the eyes.

### WARNING

• DO NOT store the product in the car or any place where the temperature may exceed 60°.

• When the charging port is not in use, please keep the dust plug inserted to prevent dust or foreign matters from entering.

• DO NOT place the product in any dusty environment. Otherwise, the dust may enter the rotary knob switch and cause it to malfunction.

• DO NOT disassemble the product.

• DO NOT immerse the product in seawater or other corrosive media to avoid damage to the product.

• Please prevent it from falling and handle it with care.

• Fully charge the battery before storing the light for a long period of time.

### EXCLUSION CLAUSE

Olight is not liable for damages or injuries sustained resulting from the usage of the product inconsistent with the warnings in the manual.

THANK YOU!

### FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.  
-Increase the separation between the equipment and receiver.  
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-Consult the dealer or an experienced radio/TV technician for help.

### EU Declaration of Conformity

Dongguan Olight E-Commerce Technology Co.,Ltd declares that the equipment [ Olantern Stretch ] is in compliance with Directive 2014/30/EU and RoHS Directive 2011/65/EU & (EU) 2015/863. The full text of the EU declaration of conformity is available at the following internet address: <https://www.olight.com/download>.

02

### WEEE Disposal and Recycling Information

All products