

S2R BATON II

Thank you for purchasing this Olight Product.
Before use, please read the manual carefully!

INSIDE THE BOX


S2R Baton II (with battery), Magnetic Charging Cable, Lanyard, Pouch, Pocket Clip, User manual.

SPECIFICATIONS			
CHARGING			
Material: A6061-T6 aluminum alloy, Type III hard anodizing, stainless steel pocket clip.			
TURBO	HIGH	MEDIUM	LOW
1150~400 LUMENS	400 LUMENS	120 LUMENS	15 LUMENS
0.5			
2+230 MINS	4 HRS	14 HRS	100 HRS
60 DAYS			
135M	80M	45M	15M
MAX 135m	MAX 1150 lumens	MAX 4500cd	IPX8
1.5m	(L100x D23mm)	98.5g	

* All above specifications are test results based on ANSI/NEMA FL1-2009 Standard. The tests are performed using the battery included in the flashlight.

BATTERY INSTALLATION

If the battery needs to be changed, Make sure that the negative polarity side is inserted facing the direction of the flashlight head (the side of the LED).

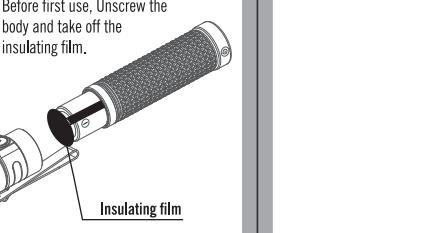

SUPPORTED BATTERIES

• 1 x 18650 or 2 x CR123A

CHARGING

Charge the flashlight before your first use. Connect one end of the portable charging cable with an external USB power source and attach the other to the tailcap. The charging indicator light glows red while the flashlight is being charged. The charging indicator will glow green when the flashlight is fully charged or on standby. A USB power source is not included in the package. You can charge the product through USB ports on the computer, USB mobile phone chargers, or portable power banks.

CONTENTS

(EN) English	01
(CHS) 简体中文	02
(FI) Finnish	03
(NO) Norwegian	04
(SE) Swedish	05
(NED) Nederland	06
(PL) Polska	07
(DE) Deutsch	08
(HU) Magyarország	10
(RU) Русский	11
(ES) Español	13
(RO) Româñesc	14
(JP) 日本語	15
(FR) Français	17
(BG) Български	18
(IT) Italia	19

(EN) English

HOW TO OPERATE

ON/OFF: Single click the side switch to turn the light on/off. When the light is turned on, it will return to the previous brightness level selected before the light was turned off. Only the moonlight, low, medium and high mode can be memorized when the flashlight is switched off. The turbo mode is memorized as high mode. The strobe mode cannot be memorized.

LOCK/UNLOCK: When the flashlight is off, press and hold the side switch to access the button lockout mode (the flashlight will enter the lowest mode first and will then switch off to signal the lockout mode). Under the lockout mode, press and hold the side switch for less than one second without releasing it and the flashlight will enter the lowest mode again. To unlock the flashlight, simply press and hold the side switch for over one second and release it to return to normal functionality.

CHANGE BRIGHTNESS LEVEL:

When the flashlight is on, press and hold the side switch to automatically cycle through the moonlight, low, medium, high, and low modes. The mode is selected when the side switch has been released.

MOONLIGHT:

When the flashlight is off, press and hold the side switch for over one second to access the moonlight mode.

DIRECT ACCESS TO TURBO:

To enter Turbo mode, quickly double click the side switch to enter Turbo mode, and quickly double-click the side switch again to exit Turbo mode. When the memorized mode is on high, quickly double-click the side switch to exit Turbo mode and switch to medium mode. When the memorized mode is Medium, Low, or Moonlight, quickly double click the side switch to exit Turbo mode and switch to the previously memorized mode.

ON/OFF:

Single click the side switch to turn the light on/off. When the light is turned on, it will return to the previous brightness level selected before the light was turned off. Only the moonlight, low, medium and high mode can be memorized when the flashlight is switched off. The turbo mode is memorized as high mode. The strobe mode cannot be memorized.

ENCENDER/APAGAR:

Sólo con un clic en el botón lateral se enciende la lámpara que identifica el estado encendido / apagado. Cuando la luces se enciende, permanece presionado el botón lateral para mantenerla encendida. Una vez se apaga, permanece presionado el botón lateral para apagarla.

BLOQUEO/DEBLOQUEO:

Con la lámpara apagada, mantenga presionado el botón lateral para acceder a la configuración de cromometraje. Mantenga presionado el botón lateral para activar el modo de cromometraje. Mantenga presionado el botón lateral para activar el modo de estroboscopio.

MODIFICAR NIVEL DE LUMINOSIDAD:

Al mantener presionado el botón lateral, se activa el modo de brillo anterior. Cambie el modo deseado presionando el botón lateral. Mantenga presionado el botón lateral para activar el modo de estroboscopio.

TEMPORIZADOR:

El temporizador se activa al mantener presionado el botón lateral durante 9 segundos. La lámpara se apaga automáticamente y permanece apagada durante 3 minutos.

MODIFICAR NIVEL DE LUMINOSIDAD:

Al mantener presionado el botón lateral, se activa el modo de brillo anterior. Cambie el modo deseado presionando el botón lateral. Mantenga presionado el botón lateral para activar el modo de estroboscopio.

MODIFICAR NIVEL DE LUMINOSIDAD:

Al mantener presionado el botón lateral, se activa el modo de brillo anterior. Cambie el modo deseado presionando el botón lateral. Mantenga presionado el botón lateral para activar el modo de estroboscopio.

MODIFICAR NIVEL DE LUMINOSIDAD:

Al mantener presionado el botón lateral, se activa el modo de brillo anterior. Cambie el modo deseado presionando el botón lateral. Mantenga presionado el botón lateral para activar el modo de estroboscopio.

MODIFICAR NIVEL DE LUMINOSIDAD:

Al mantener presionado el botón lateral, se activa el modo de brillo anterior. Cambie el modo deseado presionando el botón lateral. Mantenga presionado el botón lateral para activar el modo de estroboscopio.

(CHS) 简体中文

HOW TO OPERATE

ON/OFF: 单按侧键开/关机。开机时，手电点亮在记忆存储的亮度。(月光、中光、高光和低光)。当闪光灯关闭时记忆。(月光、低、中、高光模式可以被记忆。)

LOCK/UNLOCK:

当闪光灯关闭时，长按侧键，进入锁键状态。如短时间(小于1秒)按住侧键输出月光，当释放后输出关闭，仍保持在锁键状态。持续按住侧键，直到输出关闭一次后释放侧键，解锁并开启在月光。

CHANGE BRIGHTNESS LEVEL:

当闪光灯亮时，长按侧键改变亮度，输出从当前亮度开始，按月光—低—中—高—低顺序改变。释放侧键恢复到上次亮度。

MOONLIGHT:

当闪光灯关闭时，长按侧键，手电将进入月光模式。

DIRECT ACCESS TO TURBO:

快速双按侧键进入涡轮模式，再快速双按侧键退出涡轮模式。当高光模式被记忆时，快速双按侧键进入涡轮模式，再快速双按侧键退出涡轮模式，切换到中光模式。

ON/OFF:

单按侧键打开手电，再次按侧键关闭手电。当闪光灯亮时，手电将进入月光模式。

ENCENDER/APAGAR:

仅通过侧键即可开关机，同时可选择亮度。

BLOQUEO/DEBLOQUEO:

当闪光灯关闭时，长按侧键，进入锁键状态。如短时间(小于1秒)按住侧键输出月光，当释放后输出关闭，仍保持在锁键状态。持续按住侧键，直到输出关闭一次后释放侧键，解锁并开启在月光。

MODIFICAR NIVEL DE LUMINOSIDAD:

当闪光灯亮时，长按侧键改变亮度，输出从当前亮度开始，按月光—低—中—高—低顺序改变。释放侧键恢复到上次亮度。

TEMPORIZADOR:

当闪光灯亮时，长按侧键，手电将进入月光模式。

MODIFICAR NIVEL DE LUMINOSIDAD:

当闪光灯关闭时，长按侧键，手电将进入月光模式。

MODIFICAR NIVEL DE LUMINOSIDAD:

当闪光灯关闭时，长按侧键，手电将进入月光模式。

MODIFICAR NIVEL DE LUMINOSIDAD:

当闪光灯亮时，长按侧键改变亮度，输出从当前亮度开始，按月光—低—中—高—低顺序改变。释放侧键恢复到上次亮度。

TEMPORIZADOR:

当闪光灯亮时，长按侧键，手电将进入月光模式。

MODIFICAR NIVEL DE LUMINOSIDAD:

当闪光灯亮时，长按侧键，手电将进入月光模式。